

State

Required Actions



Constant Solid Blue

Issue with Firmware:
Install newest airconsole firmware Via the TFTP recovery Process from support.get-console.com



Constant Solid Red

No Firmware Present:
Install newest airconsole firmware Via the TFTP recovery Process from support.get-console.com



Red/Blue Faint

Not Enough Power:
Charge airconsole using micro USB and restart.



Dark/No light

No Power or airconsole Off:
Check airconsole is switched on.
Charge if battery is flat.